



How To: Burr Holder Replacement

Encore, Virtuoso, Preciso

Time: 2 mins

Difficulty: Easy

Tools/Supplies: Flathead Screwdriver

Parts: [Plastic Burr Holder](#)


Additional Resources: [How to Video](#)

***** Unplug the grinder from power supply *****

Twist hopper counterclockwise past 40, then lift to remove

Lift and remove black silicone gasket


Lift and remove the ring burr and holder assembly (pictured below)

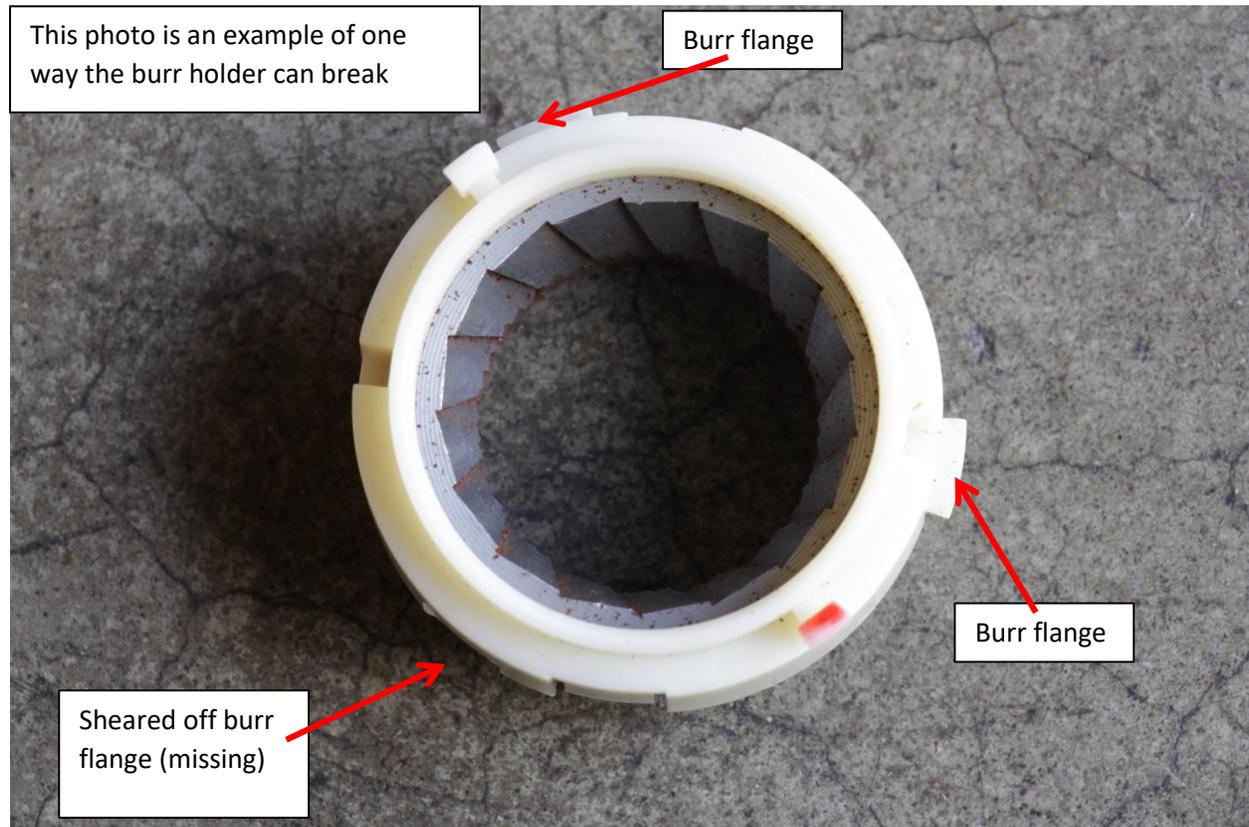




Continued below

Removing burr holder- There are two retaining clips securing the burr holder to the metal ring burr. One must be broken to remove the old burr holder.

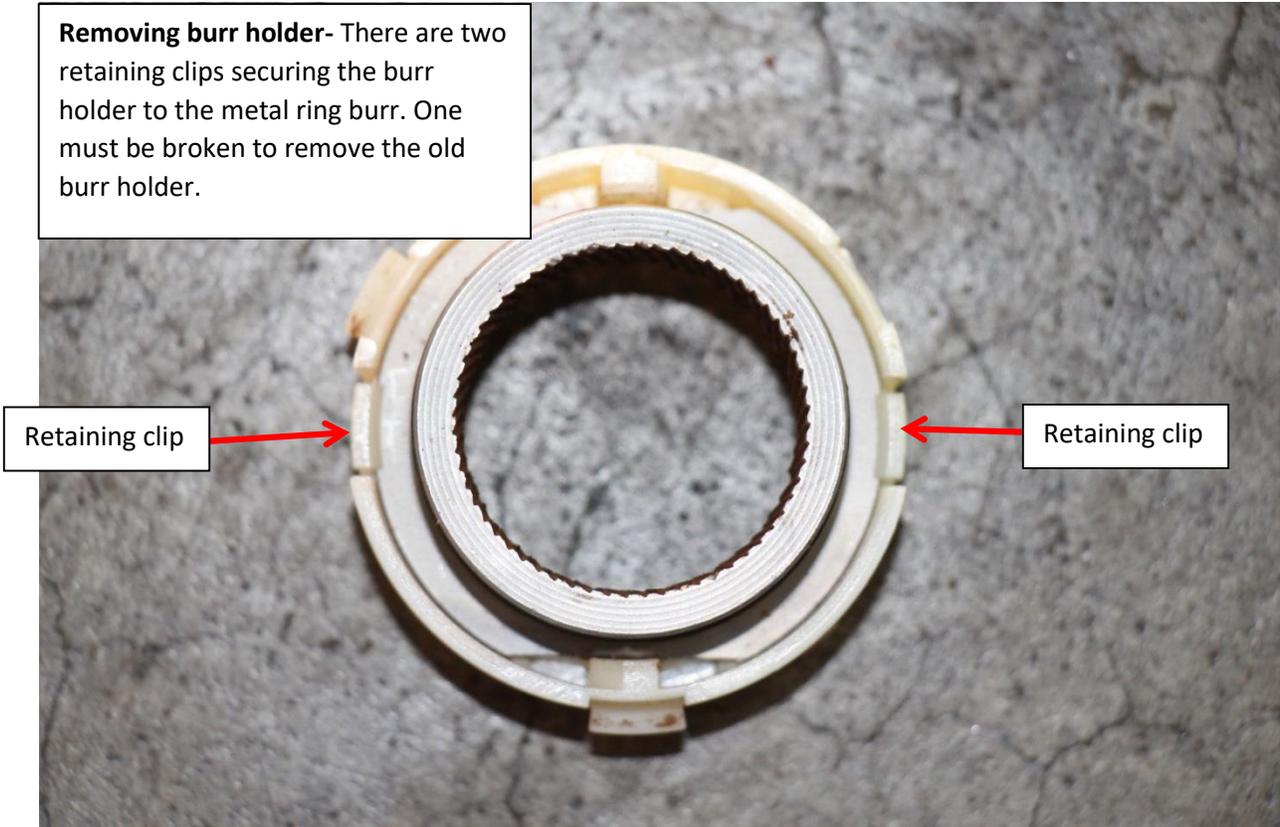




Use a flathead screwdriver or a similar tool to apply sideways pressure and break one retaining tab

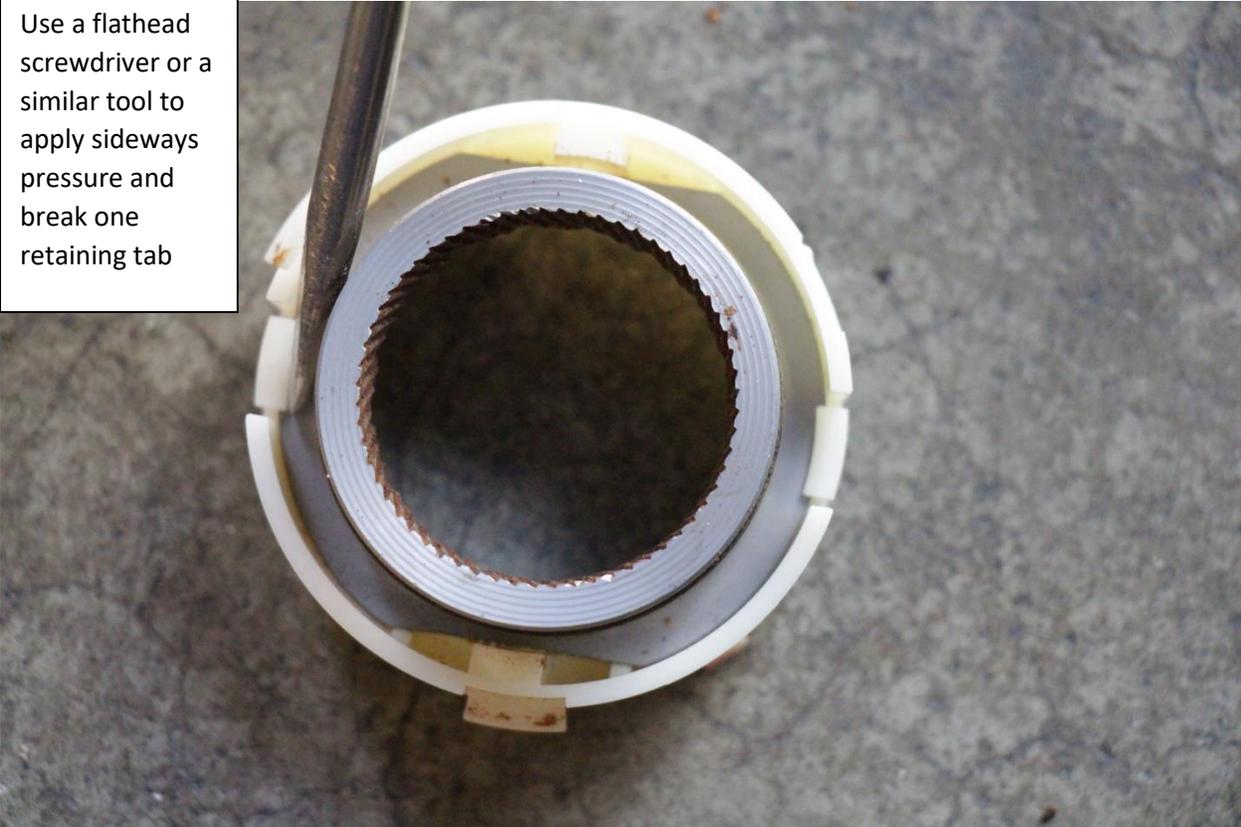

Once a retaining tab is broken, the metal will easily separate from the burr holder

Broken retaining tab

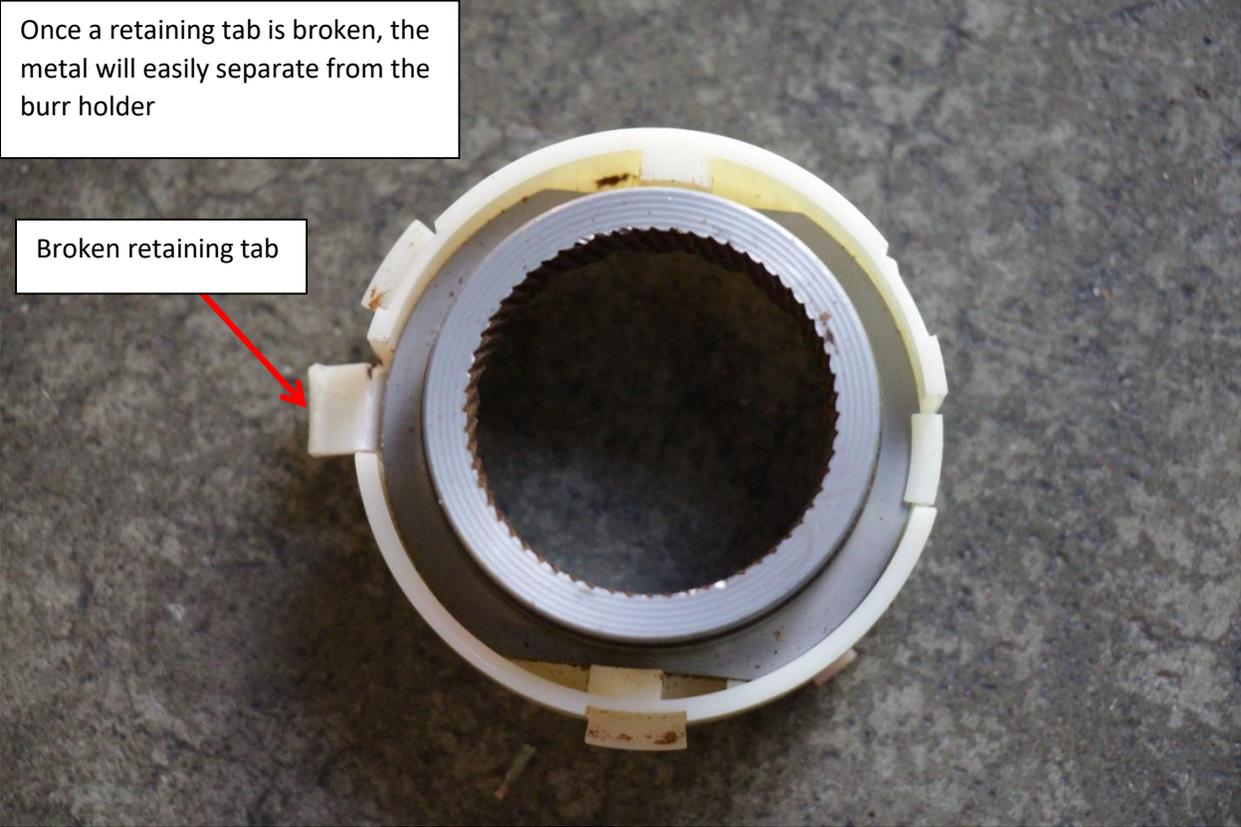




To install the new burr holder- Slide one of the rounded edges of the metal ring burr under one of the retaining clips

Metal ring burr is resting on top of retaining clip


Retaining clip

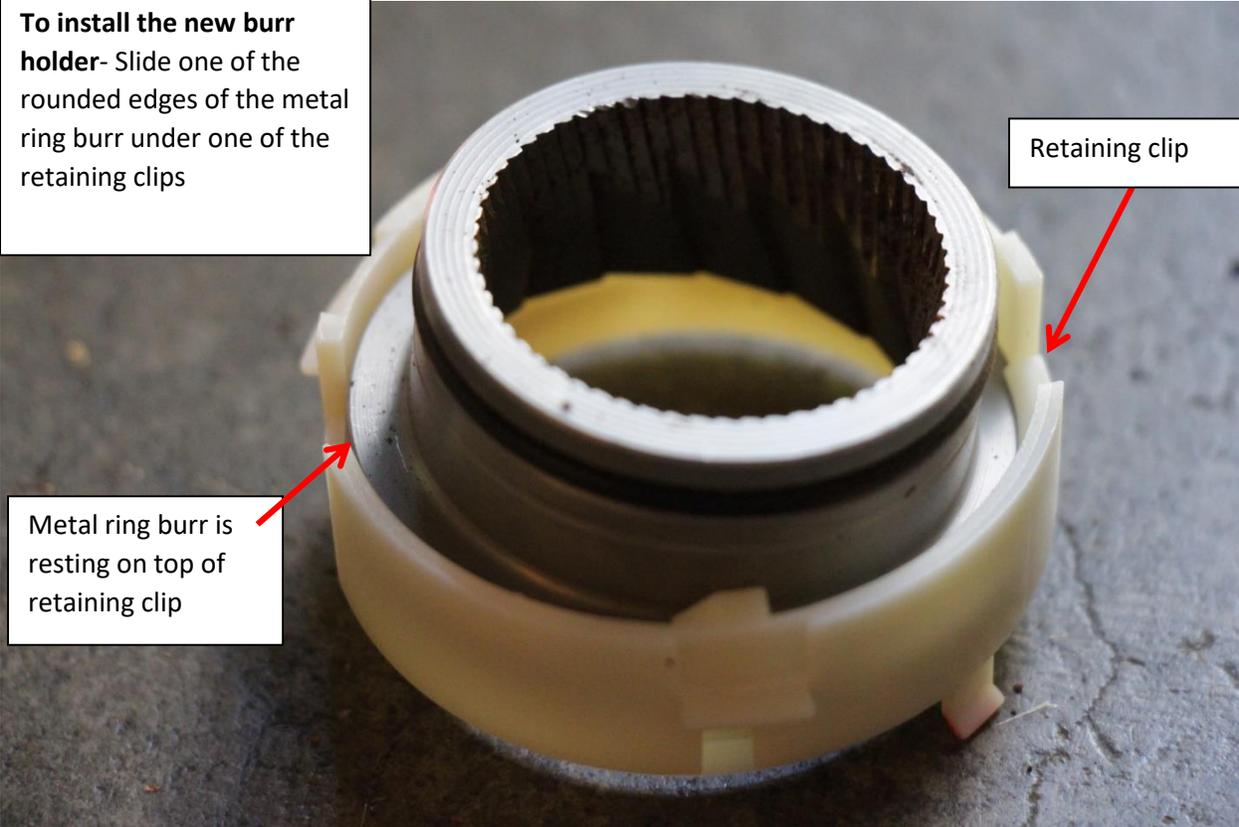

Squeeze the parts together hard to snap the second retaining clip over the metal ring burr


Squeeze

Squeeze

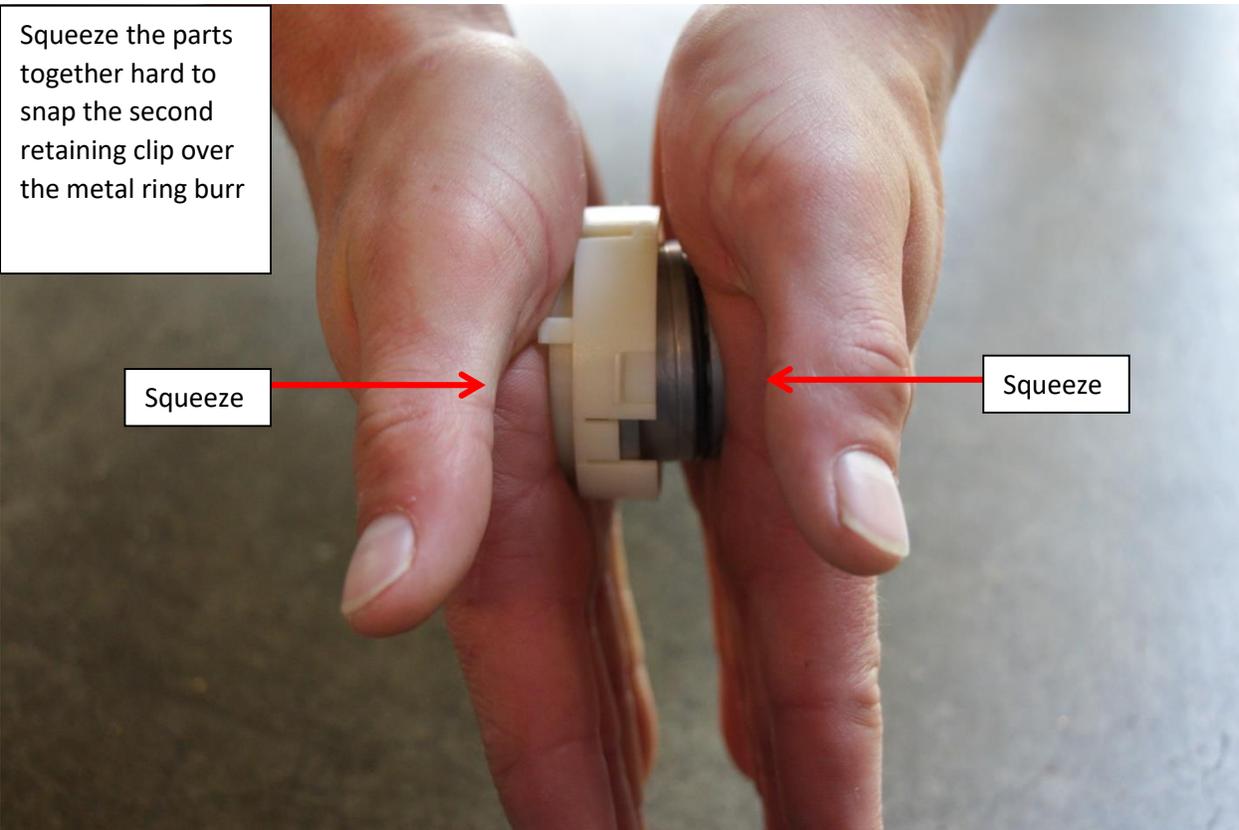



When reassembling, the red tab **must** be near the front right of the machine and line up with the rectangular “5 o’clock alignment cutout”.

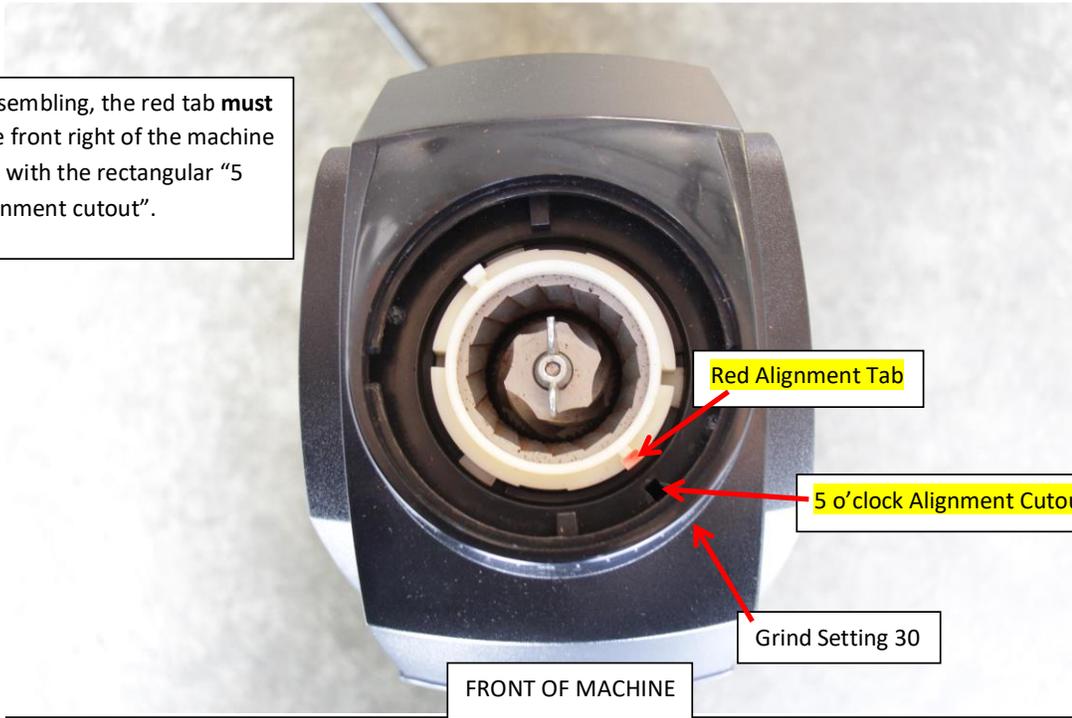

-End-